



Cozy™ Products

INSTRUCTION GUIDE

COZY LEGS

MOUNTING - Follow instructions found in the plastic bag containing the adhesive mounting pads and alcohol wipes. *

Power Connection - Plug Cozy Legs into a 115 VAC outlet. Peel the backing off of the adhesive pad on the back of the switch and mount it in a convenient location**.

CAUTION - Operate in vertical position only. Do not use on floor. Do not drape or cover product with any material. Always allow heat to escape. Avoid exposure to moisture. Remember to turn off Cozy Legs when not in use. To clean, unplug unit and wipe with a damp cloth.

Order Model # NCL 100 watts

* Also available: Metal floor stand MODEL: # STAND

** Optional HI / LO heat controller MODEL: # 160731T



COZY TOES

Product must be used **only** with gray carpet & TRILITE Logo face up.

Power Connection - Plug Cozy Toes into a 115 VAC outlet. Peel the backing off of the adhesive pad on the switch and mount it in a convenient location*.


CAUTION - Never place objects other than your feet on Cozy Toes. This includes household pets, cloth, chairs, desks, etc... This could cause overheating or puncturing of the product. Keep away from wet areas and excessive moisture. Remember to turn off Cozy Toes when not in use. If cleaning is necessary, unplug product and use a dry carpet cleaner and vacuum.

Order Model # NCT 75 watts

* Optional HI / LO heat controller MODEL: # 160731T



953036 Rev. 8/03

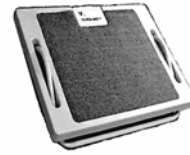

COZY FOOT REST

Power Connection - Plug Cozy Rest into a 120 VAC outlet. output. output. Peel the backing off of the adhesive pad on the back of the switch and mount it in a convenient location*.

CAUTION - Never place objects other than your feet on Cozy Rest. This includes household pets, cloth, chairs, desks, etc... This could cause overheating or puncturing of the product. Keep away from wet areas and excessive moisture. Remember to turn off Cozy Rest when not in use. If cleaning is necessary, unplug product and use a dry carpet cleaner and vacuum on the carpeted area and a damp cloth on the housing. Assemble stand as shown.

Order Model # NCFR 50 Watts

* Replacement HI / LO switch # 160731T

Replacement STAND; #103042

Note: When flat is visible on switch wheel, heater is ON.



LIMITED WARRANTY

If it appears within one (1) year from the date of delivery to Purchaser that any products or component parts do not conform exactly to the specifications and physical dimensions referred to above, and the Purchaser, at its expense, returns the product or component parts to the Seller together with a report of defects, the Seller shall review the inspection report and inspect the items and shall authorize, at its option, either the repair or replacement of any non-conforming products or component parts, whether on warranty, contract of negligence, shall not in any case exceed the amount to be paid by the Seller in obtaining and repair or replacement of non-conforming products or component parts, and upon expiration of the warranty period, all liability of the Seller shall be terminated.

Seller shall not be liable for any injury, loss or damage, direct or consequential arising out of the use or the ability to use the product.

This warranty gives specific legal rights. You may have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so that the above limitation of exclusion may not apply to you.

WARNING: The individual user should take care to determine prior to use whether this device is suitable, adequate or safe for the use intended. Since individual applications are subject to great variation, the manufacturer makes no representation or warranty as to suitability or fitness of these devices for any specific application.

◆CAUTION-ATTENTION◆

To reduce the risk of electric shock, these plugs will only fit into a polarized outlet one way. If a plug does not fit into the outlet, reverse it. If it still does not fit, contact a qualified electrician. **Do not modify the plug in any way.**

Pour éviter les chocs électriques, introduit la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond. **Ne modifiez pas la lame.**

953036 Rev. 8/03