

INSTALLATION & PARTS REPLACEMENT
MODEL SW2-115

INSTALLATION; Model SW2-115 is provided with pigtail leads. Connect to 115 v. AC line only.

- 1) Remove light mechanism from the housing.
- 2) Using the housing base as a template, drill the holes necessary for mounting to a flat surface, or install a pipe flange or other mounting device.
- 3) Re-install the light mechanism.
- 4) Be sure to make the electrical connections before replacing the dome. You may wish to check for proper operation first.
- 5) Be sure that all gasketing is in place.

REPLACEMENT PARTS

ITEM	PART #	ITEM	PART #
Lamp, GE type 4416-1	420420	Dome retaining ring	206000
Motor, 12 v. w/gear	166028T	Transformer	623011
Dome, (specify color)	206013	Rectifier bridge	696400
Gasket "O" ring	816002	Gasket, flat CCS	816003
Housing	206004		

WARRANTY

If it appears within one year from date of delivery to Purchaser that any products or component parts do not conform to the general specifications and physical descriptions set forth, and the Pruchaser, at his expense, returns the product or component parts to the Seller together with a report of the nature of the defect, the Seller shall review the report and authorize at Seller's option either to replace or repair said items.

The liability of the Seller to the Purchaser arising out of the supply of or the use of the products is , which are in warranty, shall not exceed the cost of the product or the parts, and upon expiration of the warranty all liability of the Seller shall be terminated.